

OWNER'S MANUAL

Assembly & Operating Instructions

Cordless Lawn Mower

RLLM40D-430



N23701



BIGGER BOYZ TOYZ



Thank you for choosing our equipment. It was carefully engineered to provide excellent performance when properly operated and maintained.

Please read this entire manual before operating the equipment. It instructs you on how to set up, operate, and maintain your equipment safely and easily. Ensure that you and any other persons operating the equipment carefully follow the recommended safety practices at all times, as failure to do so could result in personal injury or property damage.

All information in this manual is relevant to the most recent product information available at the time of printing. Review this manual frequently to familiarise yourself with the equipment, its features, and operation. Please note that this Owner's Manual may cover a range of product specifications for various models. Characteristics and features discussed and/or illustrated in this manual may not be applicable to all models. We reserve the right to change product specifications, designs, and equipment without notice and without incurring obligation.

Customer Support

Before initiating a product return, kindly reach out to our dedicated Customer Support Department at Bigger Boyz Toyz. We are here to assist you.

Phone: 02 4257 4787

Email: bbt@bbta.com.au

Warehouse: Unit 2/3 Delta Place, Albion Park Rail NSW 2527

If you have difficulty assembling the product or have any questions about the controls, operations, or maintenance of the equipment, please don't hesitate to get in touch with our Customer Support Department.

Contents

Introduction	4
Intended purpose.....	4
General description.....	5
Extent of the delivery.....	5
Function description.....	5
Overview	5
Technical specifications.....	6
Symbols and icons	6
Safety information	7
General notes on safety.....	7
Assembly.....	11
Mounting the lower bar.....	11
Mounting the upper bar	11
Mounting the grass collection box.....	11
Mulch kit.....	12
Operation	12
Mounting/removing the grass collection box	12
Filling level indicator.....	12
Setting the cutting height	12
Inserting/removing the rechargeable battery	13
Switching on and off.....	13
Auto/Eco mode.....	13
Checking the charge status of the battery	13
Working with the device.....	14
Cleaning/maintenance	14
General cleaning and maintenance work	14
Replacing blades.....	15
Storage.....	15
Disposal/environmental protection	15
Spare Parts/Accessories	15
Trouble Shooting.....	16

Introduction

Congratulations on the purchase of your new device. With it, you have chosen a high quality product.

During production, this equipment has been checked for quality and subjected to a final inspection. The functionality of your equipment is therefore guaranteed.



The operating instructions constitute part of this product. They contain important information on safety, use and disposal.

Before using the product, familiarise yourself with all of the operating and safety instructions. Use the product only as described and for the applications specified.

Keep this manual safely and in the event that the product is passed on, hand over all documents to the third party.

Intended purpose

This device is intended only for cutting lawns and grassed areas in residential applications.

The device is intended to be used by do-it-yourselfers. It was not designed for heavy commercial use.

Any other use that is not expressly permitted in these instructions may result in damage to the device and pose a serious hazard to the user. The device is intended for use by adults. Children and people who are not familiar with these operating instructions may not use the device. The use of the device in the rain or a damp environment is prohibited.

The manufacturer is not liable for damage caused by improper use or incorrect operation.

General description



See the front fold-out pages for illustrations.

Extent of the delivery

Carefully remove the equipment from the packaging and check whether the following parts are complete:

- Cordless lawnmower and upper bar
- Lower bar
- Grass collection box
- Handle for grass collection box
- 2 cable holders
- 2 tightening levers with washers and screws for fastening the upper bar
- Mulch kit
- 2 20-V batteries
- Double charger
- Translation of the original instructions for use

Dispose of the packaging material correctly.

Function description

The cordless lawnmower has a cutting tool, which turns parallel to the cutting level. It is equipped with a high performance electric motor, robust plastic housing, safety switch, collision guard, and grass box. Additionally, the equipment is height adjustable to six levels and has smooth-running wheels. For the function of the operating parts, please refer to the descriptions below.

Overview

- | | |
|----------|---|
| A | 1 Upper bar |
| | 2 Tightening levers for fastening the upper bar |
| | 3 Lower bar |
| | 4 Impact protection |
| | 5 Tightening levers for fastening the lower bar |
| | 6 Carrying handle |
| | 7 Lever for cutting height adjustment |
| | 8 Cover |
| | 9 Rechargeable batteries |
| | 9a Release button on rechargeable battery |
| | 10 Ignition key |
| | 11 Wheels |
| | 12 Appliance housing |
| | 13 Grass collection box |
| | 14 Cable holder |
| | 15 Machine cable |
| | 16 Release button |
| | 17 Start handle |
| | 18 Mulch kit |
| | 19 Double charger |
| D | 13a Plastic tabs |
| | 13b Grass collection box rods |
| | 13c Handle for grass collection box |
| G | 20 Auto/eco switch button |
| | 21 Button for the charge status display |
| | 22 Battery charge level indicator |
| J | 18a Bracket on mulch kit |
| H | 23 Blade |
| | 24 Blade bolt |
| | 25 Motor spindle |

Technical specifications

Cordless lawn mower RLLM40D

Motor voltage 40 V == (2x 20V)

Idle speed n_1 2900 min⁻¹

Idle speed n_2 3300 min⁻¹

Cutting circle 430 mm

Cut height 25/35/45/55/65/75 mm

Protection class III

Protection type IPX1

Weight (without battery and charger) 16.2 kg

Grass collection box volume 50 l

Sound pressure level

(L_{pA}) 79.4 dB(A); K_{pA} = 3 dB

Sound power level (L_{WA})

measured 92 dB(A); K_{WA} = 1.89 dB

guaranteed 96 dB(A)

Vibration (a_h) 1,33 m/s²; K = 1.5 m/s²

Noise and vibration values have been determined according to the standards and regulations mentioned in the declaration of conformity.

The stated vibration emission value was measured in accordance with a standard testing procedure and may be used to compare one power tool to another.

The stated vibration emission value may also be used for a preliminary exposure assessment.



Warning: The vibration emission value may differ during actual use of the power tool from the stated value depending on the manner in which the power tool is used. Try to keep the exposure to vibrations as low as possible. Examples of measures to reduce vibration exposure are the wearing of gloves when using the tool and limiting the working hours. For this purpose all

parts of the operating cycle have to be considered (for example, times when the electric tool is switched off and times when it is switched on but running without any load).

Symbols and icons

Symbols on the equipment:



Caution!



Risk of electric shock!



Read the operating instructions carefully.



Risk of injury from parts being thrown up.



Keep nearby people away from the appliance.



Caution – sharp cutting blade! Keep feet and hands away. Risk of injury!



Caution! The lawnmower blade continues to run after switching off.



Switch off the motor and remove the ignition key before carrying out adjustments or cleaning work.



Wear ear and eye protection.



Do not expose the unit to rain.



Noise level specification L_{WA} in dB.



Do not dispose of electrical equipment in domestic waste.

430 mm

 


Cutting circle



Battery charge level indicator und Auto/eco switch button on the upper bar.

Filling level indicator on the grass collection box



Filling level indicator open:
Grass box empty.



Filling level indicator closed:
Grass box full.

Symbols in the manual:



Warning symbols with information on damage and injury prevention.



Instruction symbols (the instruction is explained at the place of the exclamation mark) with information on preventing damage.



Help symbols with information on improving tool handling.



Read the operating instructions carefully.



Wear protective gloves.

Safety information

This section describes the basic safety rules when working with the device.

General notes on safety



IMPORTANT
READ THE OPERATING INSTRUCTIONS CAREFULLY.
STORE THE OPERATING INSTRUCTIONS FOR LATER REFERRAL.



This equipment may cause serious injury in the case of improper use. In order to avoid injury to people and damage to property, the following safety information must be observed and users must familiarise themselves with all operating parts.

- Read the operating instructions carefully.
- This device must not be used by children. Children should be supervised to ensure that they do not play with the device. Cleaning and maintenance must not be carried out by children.
- This device can be used by individuals with reduced physical, sensory or mental abilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the resulting hazards.

Preparation:

- Never allow children or other people who are unfamiliar with the operating instructions to use the device. Local regulations may specify the minimum age of the operator.

- The device must never be used if people – especially children – or pets are nearby. Children must never play with the device.
- The operator or user is responsible for any accidents or personal injury and/or material damage to third parties or their property.
- Check the terrain on which the device will be used and remove any stones, sticks, wires or other foreign objects which may be drawn into the device and ejected.
- Wear suitable work clothing, such as solid shoes with non-slip soles as well as long, robust trousers. Never use the device barefooted or wearing open sandals. Avoid wearing loose clothing with hanging laces or belts.
- Before use, always perform a visual inspection to check whether the cutting blades, fastening bolts and the whole cutting unit are worn out or damaged. Do not use the device if its safety equipment (e.g. impact protection or grass collection box), parts of the cutting unit or bolts are missing, worn or damaged. Damaged or worn cutting blades and fastening bolts must only be replaced as a set to prevent imbalance.
- Seien Sie vorsichtig bei Ge
- Take care when using devices with several cutting tools since the movement of one blade can lead to rotation of the other blades.
- Only use spare parts and accessories which are supplied and recommended by the manufacturer. Using externally produced parts results in the immediate loss of the warranty claim.
- Worn or damaged information signs must be replaced.

Working with the Equipment:



Do not place feet or hands near or under rotating parts when working. Risk of injury!

- Switch the motor on as directed and only if your feet are a safe distance away from the cutting tools.
- Do not use the device in the rain, poor weather, damp environments or on wet lawn. Only work in daylight or where there is sufficient illumination.
- If you are tired or lacking in concentration or have consumed alcohol or tablets, do not work with the device. Always have a break on time. Work using common sense.
- Always ensure secure positioning, particularly on slopes, when working. Always move crosswise across slopes, never up or down. Take special care when changing the direction of travel on slopes. Do not work on overly steep slopes.
- Only operate the device at walking speed. Take special care when turning the device around, pulling it towards you or going backwards.

Turn the device on with care in accordance with these operating instructions. Ensure your feet are at a sufficient distance from the rotating blades.

Do not tilt the device when starting it up, unless this is required when starting up in long grass. In such an event, tilt the device by pushing down on the grip handle in such a way that the front wheels of the device raise slightly. Always check that both hands are in the working position before placing the device again on the ground.

Never work without the grass collection box or impact protection. Always keep away from the ejector opening.

Do not start the motor when standing in front of the discharge chute.

 **Caution! Danger!** The blade continues to run after switching off. There is a risk of injury.

The device must not be lifted or transported while the motor is running. Turn the device off if it needs to be tilted for transport, if surfaces other than lawn need to be traversed, and while the device is being brought to and from the mowing terrain.

Always keep the grass ejector opening clean and free of debris. Only remove cut material when the device is at a standstill.

Never leave the device unattended at the workplace.

- Do not work with a damaged or incomplete device or one which has been converted without the permission of the manufacturer. Never use the device if the protection equipment or shielding are damaged, or if the safety equipment (deflector and/or grass collection equipment) is missing.
- Do not overload your device. Only work within the power range indicated and do not modify the controller settings on the motor. Do not use low-performance machines for heavy work. Do not use the device for purposes for which it is not intended.
- Do not use the appliance near flammable liquids or gases. There is a risk of fire or explosion if this advice is not heeded.
- Switch the device off, remove the safety key and take out the battery. Make sure that all movable parts are stationary:
 - whenever you leave the apparatus unattended and when it is not being used,
 - before removing obstructions or loosening blockages from the discharge chute,
 - before checking or cleaning the apparatus or performing any work on it,
 - if a foreign object has been hit by the device. Check for damage to the apparatus and carry out the necessary repairs before switching it on again and working with it,

- if the apparatus starts to vibrate excessively, an immediate check is required.
- make sure that all nuts, bolts and screws are properly tightened.
- inspect the apparatus for any damage.
- have any necessary repairs carried out on damaged parts.
- Do not bring your feet or hands into the vicinity of rotating parts (or beneath them). Never stand in front of the grass ejector opening.
- Always pull the circuit breaker/ignition key if:
 - you leave the apparatus unattended, before clearing blockages,
 - if you are examining, cleaning or working on the apparatus,
 - after a collision with a foreign object. Immediately examine the device for damage and, if necessary, have it repaired,
 - if the apparatus starts to vibrate in an unusual way (check immediately!).
- When starting or turning the motor on, the lawnmower must not be tilted, unless it is required to lift the lawnmower in the process. In this event, tilt it only as far as absolutely necessary and lift it only on the side facing away from the user.

Maintenance and Storage:

- Give the motor time to cool off before you store the device in an enclosed space.
- During maintenance of the cutting blades, be aware of the fact that even if the power supply is switched off, the cutting blades can be set into motion.
- Make sure that all nuts, bolts and screws are properly tightened, and that the device is in safe working order.
- Do not try to repair the device by yourself unless you have professional training. All work not specified in these operating instructions may only be carried out by customer service centres authorised by us.
- Store the device in a dry place and out of reach of children.
- Handle your device with care. Keep the tools sharpened and clean in order to be able to work better and safer. Follow the maintenance instructions.
- Wear safety gloves when replacing the cutting equipment.
- Check the grass collection unit regularly for wear and tear and deformation. Replace worn or damaged parts in the interests of safety. When setting up the blades, take care that your fingers do not become caught between the rotating blades and stationary parts of the machine.
- Ensure that only replacement cutting tools approved by the manufacturer are used.

Electrical Safety:

- The plug of the charger must fit into the socket. The plug must not be modified in any way. Do not use any adapter plugs together with electric tools that have a protective earth. Unmodified plugs and matching sockets reduce the risk of electric shock.
- Avoid body contact with earthed surfaces such as pipes, radiators, cookers and refrigerators. There is an increased risk of electric shock if your body is earthed.
- Do not expose electric tools to rain or wet conditions. The penetration of water into an electric tool increases the risk of electric shock.



Observe the safety information and notes on charging and proper use as shown in the operating instructions for your battery and charger from the Parkside X 20 V Team series.

Assembly

- Only carry out work that you know you are capable of.
- If in doubt, consult an expert or our service centre directly.

B

Mounting the lower bar

1. Fold the lower bar (3) upwards.
2. Turn the lower tightening levers (5) clockwise to fasten.

3. Lock the tightening levers (5) by pressing them in the direction of the lower bar (3). The tightening levers must be pulled tight and then positioned against the bar so that tightening can be carried out with medium force. If this fails, continue to turn the tightening lever clockwise, or loosen it by turning counter clockwise.

C

Mounting the upper bar

1. Fasten the upper bar (1) with the enclosed screws (2b), the washers (2a) and the upper tightening levers (2) on the right and left of the lower bar (3). The release button (16) must be located on the right in the mowing direction. Two positions are possible.
2. Turn the tightening levers (2) clockwise to fasten.
3. Lock the tightening levers (2) by pressing them in the direction of the bar (3). The tightening levers must rest against the bar in such a way that tightening can be carried out with medium force. If this fails, continue to turn the tightening lever clockwise, or loosen it by turning counter clockwise (see small illustration).

i

Release the tightening levers (2+5) and fold the upper bar (1) and the lower bar (3) together so that the device takes up less space. Make sure not to pinch the machine cables while doing this.

D

Mounting the grass collection box

1. Clip the handle (13c) of the grass collection box (13) into the upper side of the grass collection box (13).

- Place the plastic tabs (13a) of the grass collection box (13) over the grass collection box rods (13b).

J Mulch kit

Attaching the mulch kit

- Remove the grass collection box, if used.
- Lift the impact protection.
- Slide the mulch kit (18) into place. The bracket (18a) snaps into place.

Removing the mulch kit

- Push in the bracket (18a) on the mulch kit and remove the mulch kit (18).

Operation



The device must only be adjusted when the motor is switched off and the blade is stationary. There is a risk of personal injury.



Switch off the apparatus, remove the ignition key (A 10) and wait for the blades to come to a standstill.

E Mounting/removing the grass collection box

- To mount the grass collection box (13), lift the impact protection (4) and suspend the grass collection box (13) from both receptors.
- Fold the impact protection (4) over the grass collection box (13). This will hold the grass collection box in the correct position.
- To remove the grass collection box (13), lift the impact protection (4) and remove the grass collection box (13).

Fold the impact protection (4) back over the device housing (12).



Work may not be carried out using the device without the impact protection or grass collection box. There is a risk of injury.

Filling level indicator

There is a filling level indicator (E 26) on the side of the grass collection box (E 13).



Filling level indicator open:
Grass collection box empty.



Filling level indicator closed:
Grass collection box filled.

F Setting the cutting height

The apparatus has 6 positions for adjusting the cutting height:

- 35 mm/25 mm - low cutting height
- 55 mm/45 mm - medium cutting height
- 75 mm/65 mm - large cutting height

- Hold the carrying handle (A 6) and lift the device or push the device down.
- Grip the lever (7) for adjusting the cutting height and move it past the ratchet mechanism to the desired cutting height.

The correct cutting height is between 25 and 45 mm for an ornamental lawn and about 45 - 65 mm for a utility lawn.



A high cutting height should be selected for the first mowing of the season.

I Inserting/removing the rechargeable battery



Switch off the apparatus, remove the ignition key (**A** 10) and wait for the blades to come to a standstill.

1. To remove the battery (9) from the device, press the release button (9a) on the battery and pull the battery out.
2. To insert the battery (9), push the battery along the guide rail into the device. You will hear it click into place.

Switching on and off



The cordless lawnmower may only be used with two batteries of the Parkside X 20 V Team series.



1. Place the apparatus on a level surface.
2. Lift the cover (**A** 8) on the device housing and insert the charged batteries (9) along the guides into the device. You will hear them click into place.
3. Insert the ignition key (10) in the corresponding opening next to the rechargeable battery (9). The ignition key can only be inserted in one position. Take note of the guide groove on the opening next to the battery and on the ignition key (10) (see small image **I**).
4. Before switching the apparatus on, make sure that it is not touching any objects.



5. To switch the apparatus on, press the release button



(16) and hold it down while pressing the starting lever (17). Let go of the release button.

6. To switch the apparatus off, let go of the starting lever (17).



Due to the intelligent energy management system, the motor starts after a delay.



After switching off the equipment, the blade continues to turn for several seconds. Do not touch the moving blade. There is a risk of injury.



Auto/Eco mode

The cordless lawnmower automatically launches in the last mode used when turned on. You can switch between Auto and Eco mode by pressing the Auto/Eco switch button (20).

Auto mode: the cordless lawn mower adjusts the motor speed in accordance with the load.

Eco mode: the cordless lawn mower runs at the lowest speed for maximum battery life.

Checking the charge status of the battery

The battery charge status indicator (**G** 22) shows the state of charge of the battery (**A** 9).

Press the button for the charge level indicator (**G** 21) on the lower bar.

The charge level of the battery is indicated by illumination of the corresponding LED lights.

3 LEDs illuminated (red, orange and green):
Battery charged

2 LEDs illuminated (red and orange):
Battery partially charged

1 LED illuminated (red):
Battery needs to be charged

Working with the device



Observe noise protection rules and other local regulations.

Regular mowing stimulates the grass to an increased leaf formation, while at the same time killing weeds. Therefore, the lawn becomes denser after each mowing process, resulting in an evenly loadable lawn. The first cut takes place roughly in April when the grass is about 70 - 80 mm high. During the main growing season, the lawn is mowed at least once a week.

- Move the device at walking speed and in lines which should be as straight as possible. For a flawless mowing result, the lines should always overlap by a few centimetres.
- Adjust the cutting height so that the device is not overloaded. If this not done, the motor may become damaged.
- Always move across slopes crosswise. Take special care when going backwards and pulling the device.
- Clean the device after each use, as described in the section "Cleaning/storage".



After switching off the equipment, the blade continues to turn for several seconds. Do not touch the moving blade. There is a risk of injury.

Cleaning/maintenance



Have any work that is not described in these operating instructions performed by an authorised customer service centre. Only use original parts.



Wear gloves when handling the blade.



Switch off the apparatus, remove the ignition key (A 10) and wait for the blades to come to a standstill.

General cleaning and maintenance work



Never spray down the device with water. There is a risk of electric shock.

- Always keep the device clean. Use a brush or cloth for cleaning, but do not use any cleaning agents or solvents.
- After mowing, remove any plant remains that have become stuck to the wheels, ventilation opening, ejector opening and blade area using a piece of wood or plastic. Do not use any hard or sharp objects as these could damage the device.
- Check the device before each use for obvious defects such as loose, worn or damaged parts. Ensure that all nuts, bolts and screws are firmly in place.
- Check the covers and protective devices for damage and correct fit. Replace these if necessary.



Replacing blades

If the blade is blunt, it can be re-sharpened by a specialist company. If the blade is damaged or unbalanced, it must be replaced.

1. Turn the machine over.
2. Use firm gloves and keep hold of the blade (23). Use a spanner (SW14) to turn the blade bolt (24) counter-clockwise from the motor spindle (25).
3. Reassemble the new blade (23) in reverse order. Make sure that the blade (23) is positioned correctly (see illustration **H**) and that the blade bolt (24) is tightened.



Storage

Release the tightening levers (2+5) and fold the upper bar (1) and the lower bar (3) together so that the device takes up less space. Make sure not to pinch the machine cables while doing this.

- Store the device in a dry place out of reach of children.
- Give the motor time to cool off before you store the device in an enclosed space.
- Remove the rechargeable battery before storing the device for a long period of time (e.g. winter storage).

We are not liable for damage caused by our devices if this is caused by improper repair, the use of non-original parts or incorrect use.

Disposal/environmental protection

Remove the battery from the device and recycle the device, battery, accessories and packaging in an environmentally-friendly manner.



Electrical devices do not belong in domestic waste.

- Hand the device and the charger in to a recycling point.
- We will dispose of any defective devices that you send to us free of charge.
- Do not throw cut grass into the rubbish bin; instead, take it for composting or spread it as a mulch below shrubs and trees.

Trouble Shooting

Problem	Possible Cause	Fault Fixing
Appliance doesn't start	Rechargeable battery (A 9) discharged	Check the charge status, charge rechargeable battery (observe the separate operating instructions for the battery and charger)
	Rechargeable battery (A 9) not inserted	Insert rechargeable battery (observe the separate operating instructions for the battery and charger)
	Defective release button (A 16) or start lever (A 17)	Repair by customer services
	Defective motor	
	Grass too long	Set a greater cut height. Lift the front wheels slightly by pressing down on the bow-type handle (A 1).
Motor stops	Blockage by foreign object	Remove the foreign object
Result unsatisfactory or motor labours	Cut height too low	Set a higher cut height
	Blade (H 23) blunt	Have the blade sharpened or replace it
	Blade area blocked	Clean the equipment
	Blade (H 23) assembled incorrectly	Install the blade correctly
Blade fails to turn	Blade (H 23) blocked by grass	Remove the grass
	Blade screw (H 24) loose	Tighten the blade screw
Strange noises, rattling or vibrations	Blade screw (H 24) loose	Tighten the blade screw
	Blade (H 23) damaged	Replace the blade

WARRANTY

This product comes with a 2-year parts warranty for all items used for domestic purposes from the date of purchase. For products used for commercial purposes, the warranty period is 3 months.

Warranty coverage does not include damage caused by normal wear and tear, accidents, misuse, lack of maintenance, neglect, natural disasters, or other external causes. Additionally, damage caused by operating the equipment in a manner outside the described instructions will not be covered. The warranty is considered void if the item has been modified, altered, or tampered with by a person, excluding standard periodic maintenance.

The warranty does not cover consumables such as tyres, blades, belts, brakes, chains, clutches, bearings, and pull starts.

Misuse or Abuse: We do not offer a warranty on items damaged due to misuse, abuse, or infrequent servicing. No refund or exchange will be provided in such instances. Please check each item description for further warranty details, as some specific components of power equipment are not covered.

Australian Consumer Law: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if they fail to be of acceptable quality and the failure does not amount to a major failure.

Customer Support

For further assistance, kindly reach out to our dedicated Customer Support Department at Bigger Boyz Toyz. We are here to assist you.

Phone: 02 4257 4787

Email: bbt@bbta.com.au

Warehouse: Unit 2/3 Delta Place, Albion Park Rail NSW 2527



BBTA.COM.AU

Copyright © Bigger Boyz Toyz Australia

Unit 2/3 Delta Place Albion Park Rail NSW 2527 • 02 4257 4787

